



Dodge Engineering & Controls Inc. 196 Riverneck Road Chelmsford, MA 01824 (978) 244-1200 Fax (978)244-1422

INSTALLATION & MAINTENANCE MANUAL


EPR SERIES
ELECTRO-PNEUMATIC
POSITIONER

Air Connections

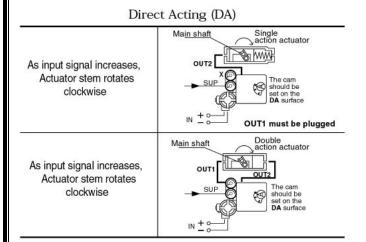

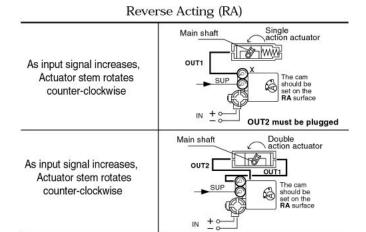

Wire Diagrams

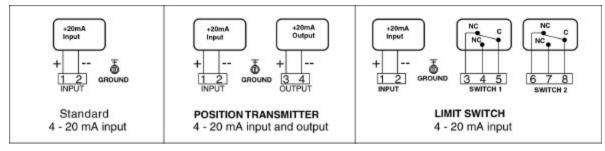

CAUTION: Always check that the electrical load is within the range stated on the nameplate. Failure to remain within electrical ratings may result in damage to or premature failure of the electrical switches, sensors or transmitter electronics.

Specifications – Current Output

Power Supply Rating: 15 – 28 VDC loop power

Recommended Power Supply: 24VDC Output Signal: 4 – 20 mA

Output Signal: 4 – 20 mA
Operating Temperature: -4° to 158° F
Load Impedance: 0 – 600 ohms
Max. Output: 35 mA DC

Linearity: ± 1.0 %

Hysteresis: 1.0% of full scale Repeatability: ± 0.5 % of full scale

Adjustment: Zero and Span in Terminal Box

Transmitter Circuit Diagram Zero Span 15 - 28 VDC Amp. LOAD Direct/ Reverse Selector Output 4-20 mA

Specifications – Limit Switches

Contacts: SPDT Form C

AC Rating: 5A - 125 VAC / 3A - 250 VAC

DC Rating: 1A – 24 VDC

Adjustment: cams with set screws